









INSTRUCTIONS FOR INSTALLATION OF WALA Q10 HANDLE










 x 1
 x 2  x 2  x 2
 MOUNTING SET









MOUNTING SET

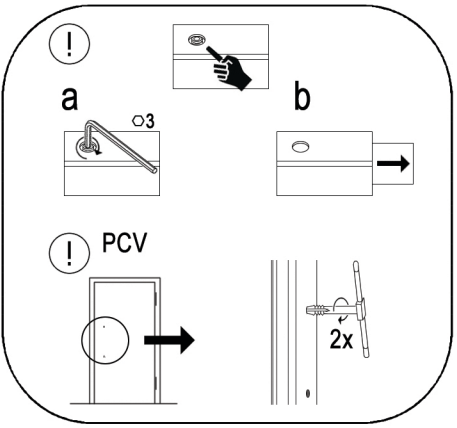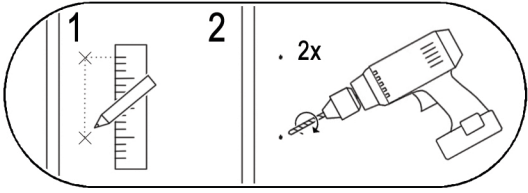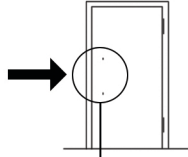- $\varnothing 11$
- $\varnothing 11$
- $\varnothing 11, \varnothing 3$
- $\varnothing 6$
- $\varnothing 11/10,5$











- GO TO
- 4-6 (p.1) → 27 (p.2)
 - 18 (p.2)
 - 12 (p.2)
 - 4 (p.1)
 - 3 (p.1)

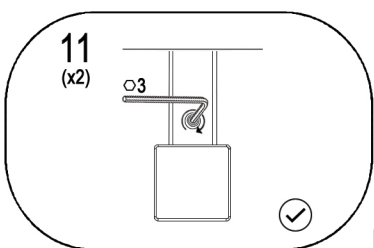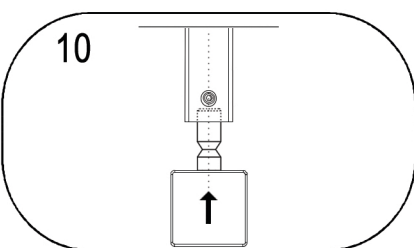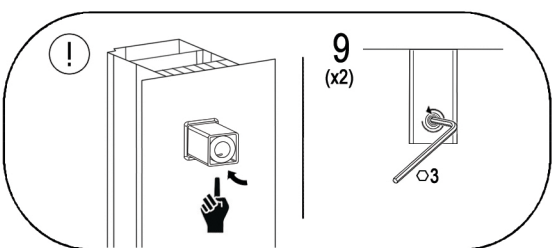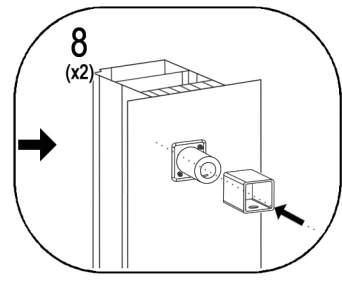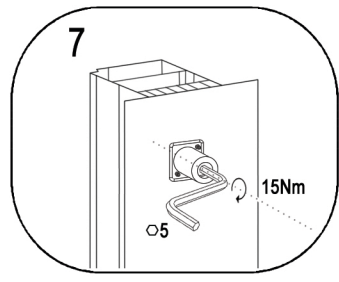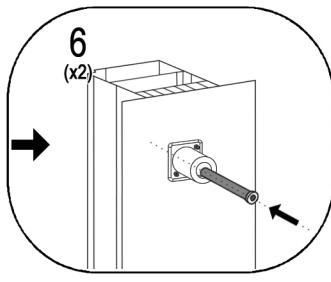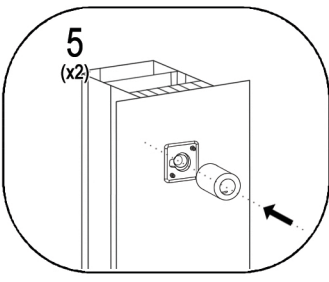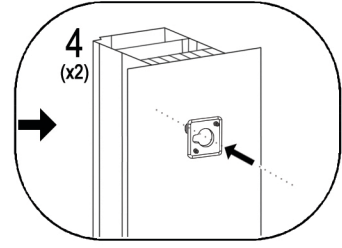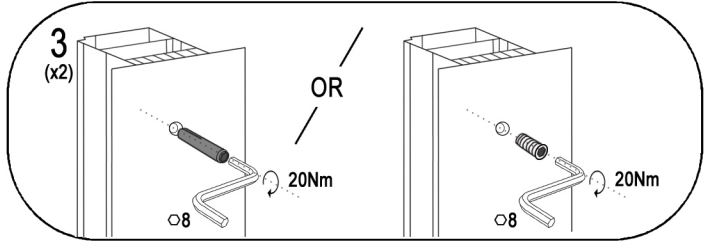






INSTRUCTIONS FOR
INSTALLATION OF
WALA Q10 HANDLE

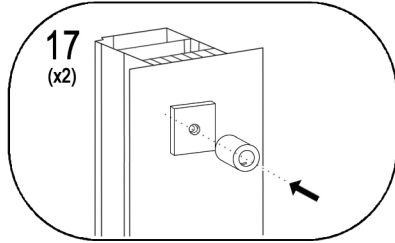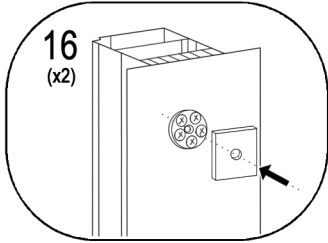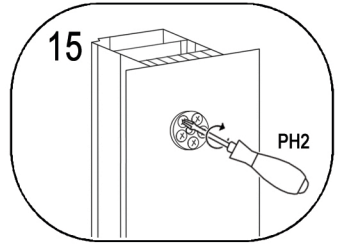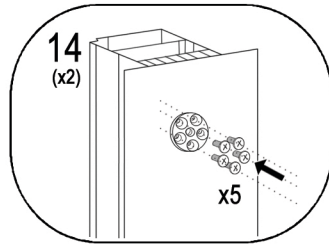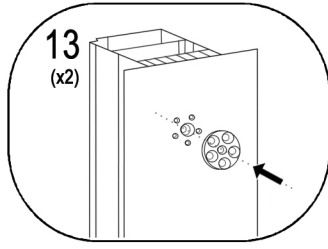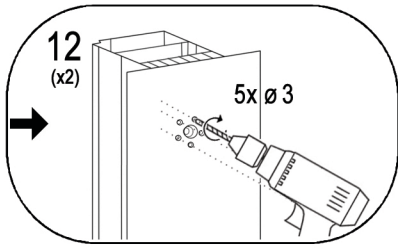

GO TO
→ 6 - 11 (p.1)

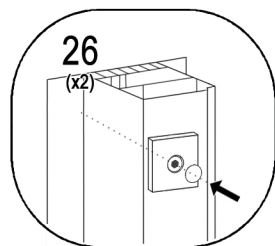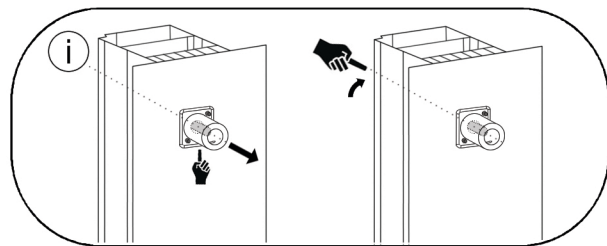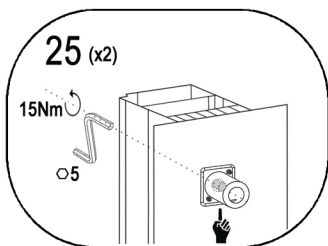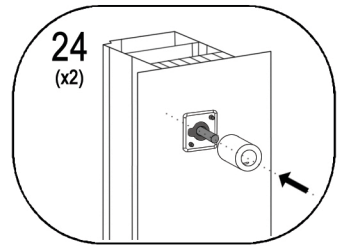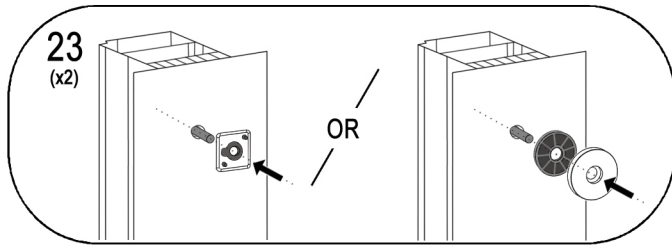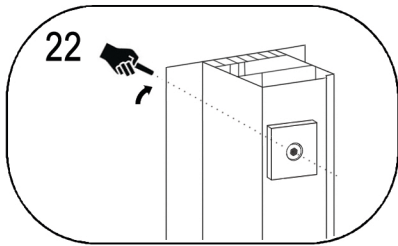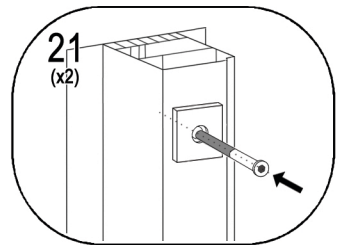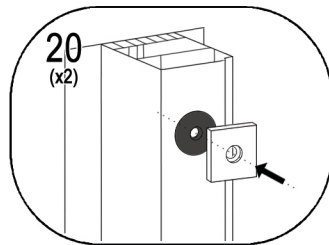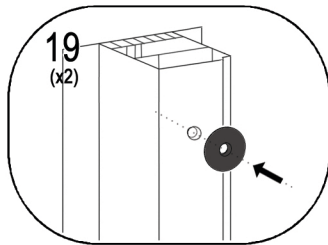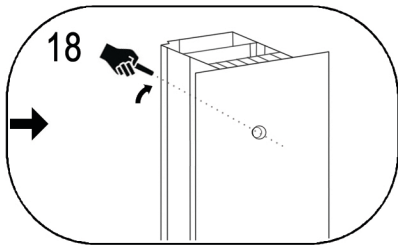

GO TO
→ 8 - 11 (p.1)

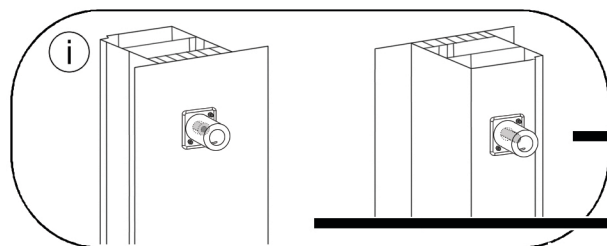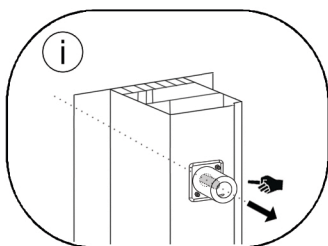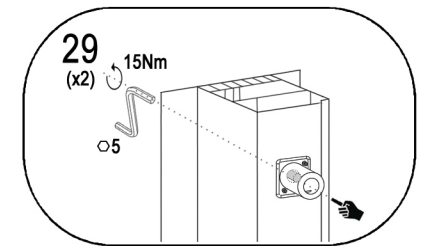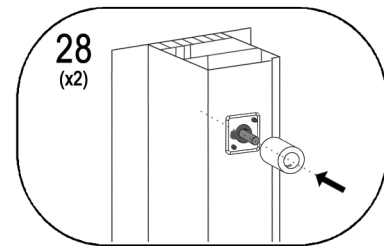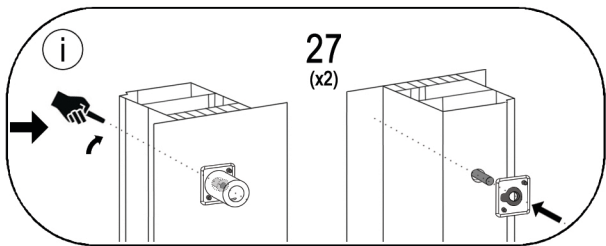

GO TO
→ 8 - 11 (p.1)